INSTALLATION INSTRUCTIONS
for the
Concept LR Cuspidor

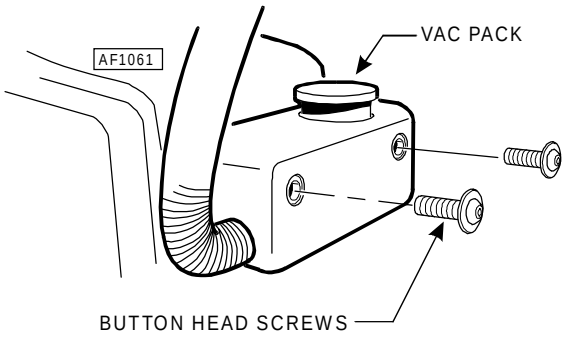

Figure 1

SECTION I - chair with Vac Pack

Follow the steps in Section I and Section III if your chair has the Vac Pack System already installed:

1. Remove the two button head screws from the Vac Pack cover (See Figure 1).
2. Position the cuspidor assembly as shown and Install it to the chair using the two socket head screws provided (See Figure 2).
3. Run the umbilical from the cuspidor along the side of the chair forward to the J box.
4. Go to Section III.

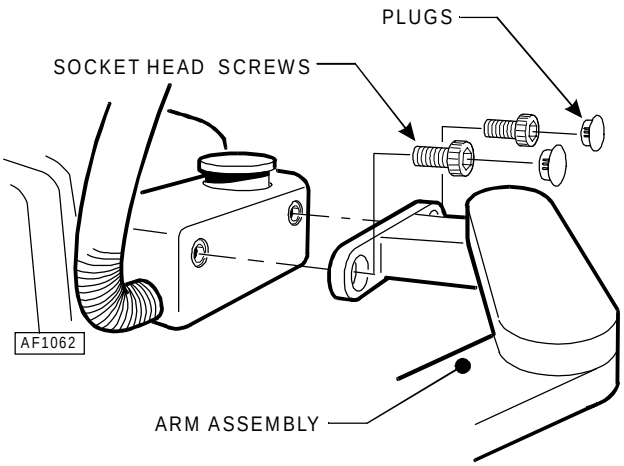

Figure 2

SECTION II - chair without Vac Pack

Follow the steps in Section II and Section III if your chair does not have the Vac Pack System:

1. Remove the three Platform covers as shown (See Figure 3). Discard the center platform cover.
2. Insert the spacers provided in the holes in the new platform cover and position the cuspidor assembly as shown. Install the assembly to the chair platform using the two socket head screws provided (See Figure 4).
4. Replace the covers.
5. Run the umbilical from the cuspidor along the side of the chair forward to the J box.
6. Go to Section III.

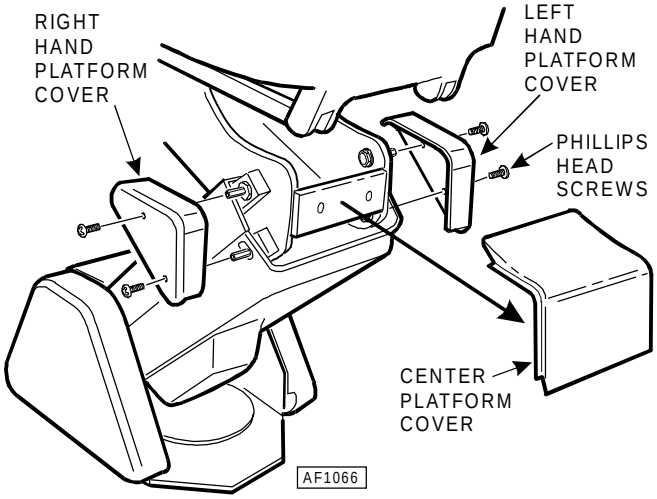

Figure 3

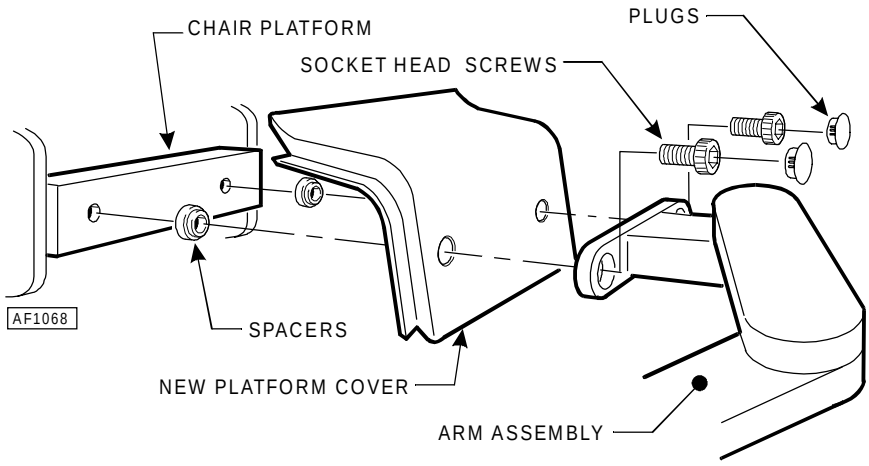

Figure 4

SECTION III - J Box Connections

1. Open the J box cover and remove the existing umbilical clamp, screws and nuts. Discard (See Figure 5).

NOTE

NOTE: If your chair is internally plumbed, use the Type I clamp to hold the umbilicals to the J box.

If your chair is externally plumbed, use the Type II clamp to hold the umblicals to the J box.

2. Position the umbilicals in the approrate slots in the new clamp as suggested (See Figure 6).
3. Secure the umbilical clamp to the J box using the wingnuts and washers provided (See Figure 5).
4. Make the connections inside the J box as shown (See Figure 7).

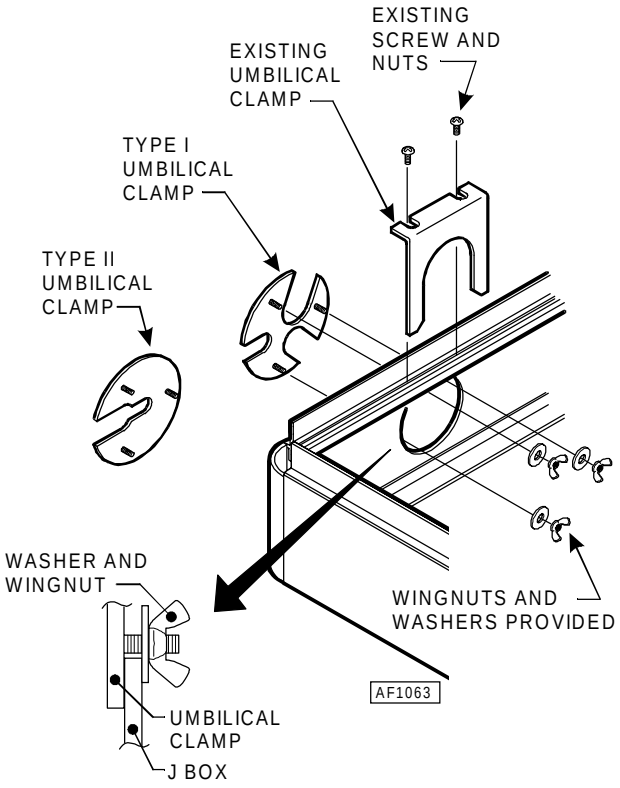

Figure 5

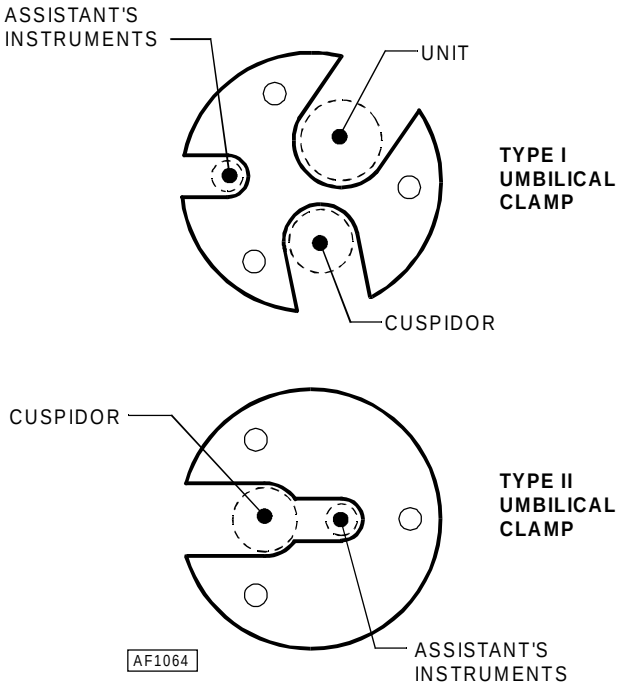

Figure 6

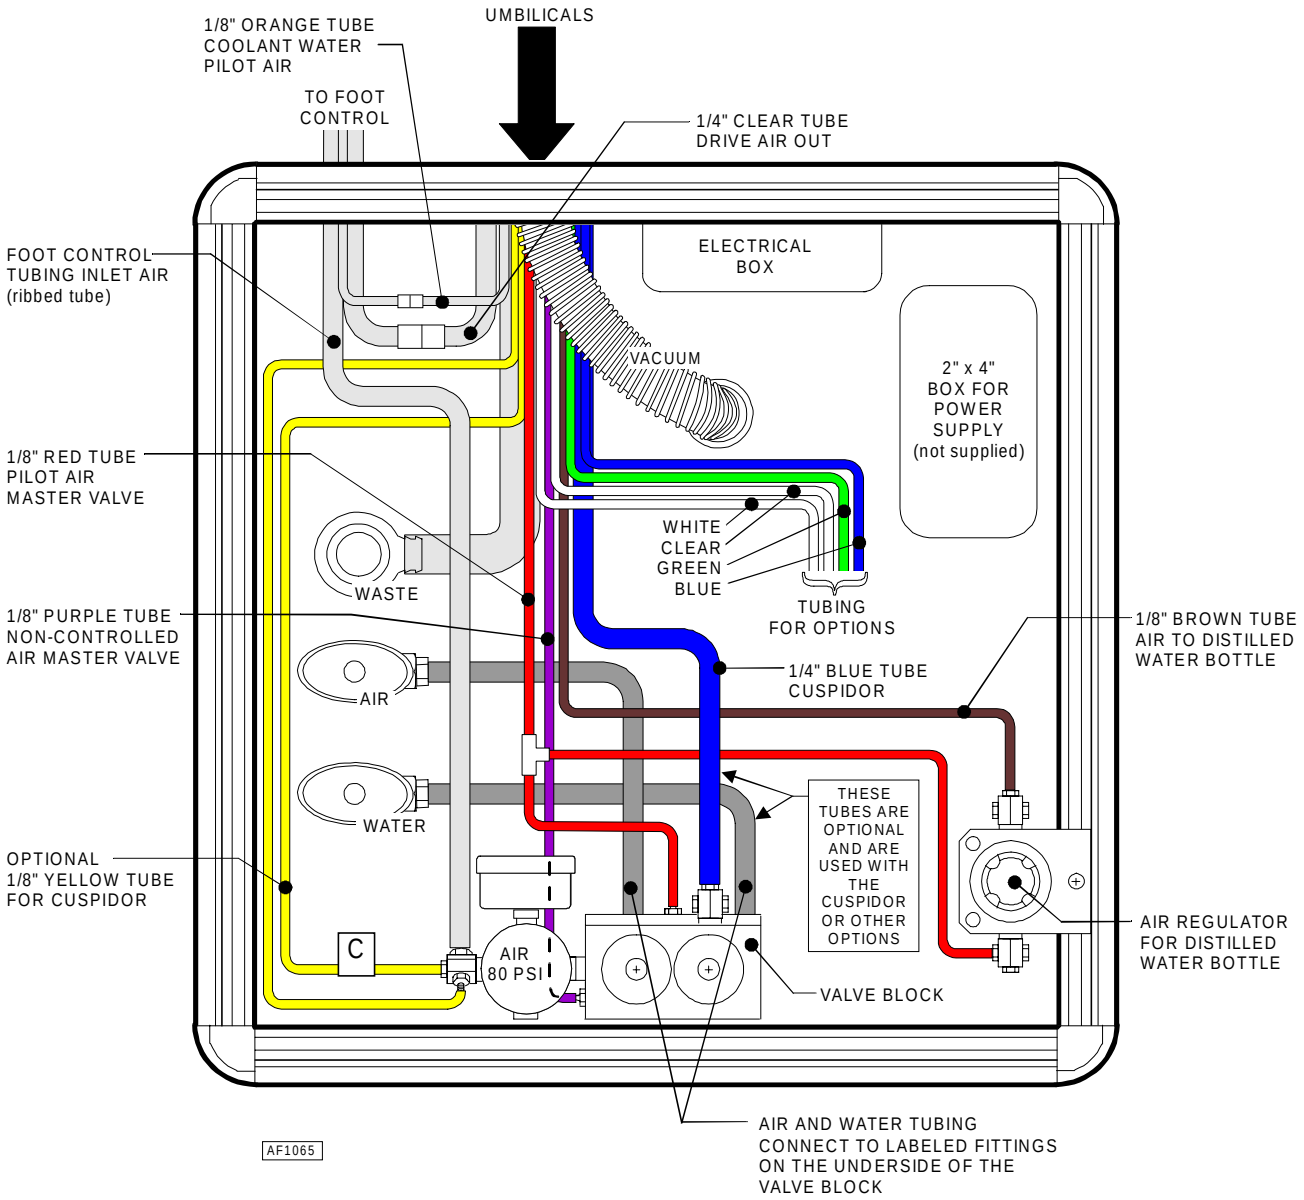

Figure 7

Knight®
by Midmark
Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542